


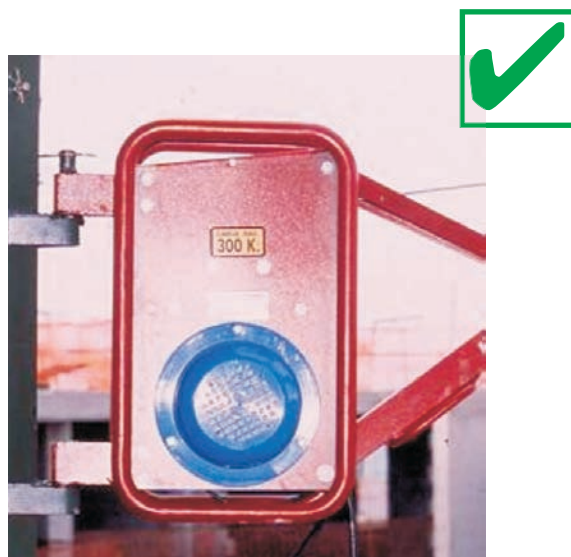

You should not overload above the maximum permissible load which will be indicated on the hoist.



## IDENTIFICATION OF RISKS

- Falls at different levels to the operator responsible for use.
- The hoist tipping or falling over.
- Falling of the load.
- Electrocution.
- Getting trapped by mobile parts.

## RISKS AND PREVENTION INFORMATION

### HOIST



 Instituto Regional de Seguridad y Salud en el Trabajo  
CONSEJERÍA DE EMPLEO Y MUJER  
**Comunidad de Madrid**


Instituto Regional de Seguridad y Salud en el Trabajo  
C/ Ventura Rodríguez, nº 7. 28008 Madrid  
Teléfono: 900 713 123 Fax: 914 205 808  
[www.madrid.org](http://www.madrid.org)



 **Comunidad de Madrid**



Assembly must be carried out using safe anchorage.

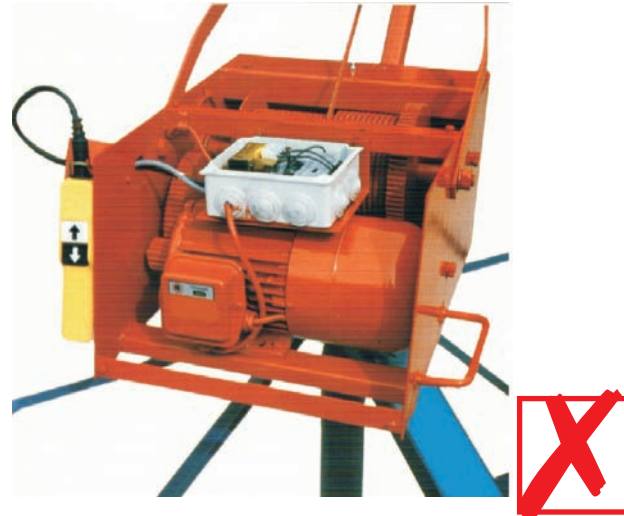

The machine must have the following elements:

- Hook with safety latch.
- Cover to protect internal mobile par.
- Protective shroud for internal mobile parts.



Use of a safety belt fixed to a sure and independent point of the machine is obligatory.

